

# GAMO-COMPACT


## TECHNICAL DATA

<b>Mechanical system</b>	Spring stroke pneumatic, single shot capacity.
<b>Caliber</b>	.177 (4.5 MM)
<b>Total length</b>	320mm
<b>Weight</b>	0.88Kg
<b>Barrel length</b>	210 mm
<b>Muzzle vel.</b>	- 120 m/s



### To Load

The Compact is fitted with a manual safe which may be applied before or after the pistol is cocked. Using the thumb of the hand holding the pistol grip, pull down the barrel catch, and fully open the barrel assembly with the free hand. With the barrel in the fully open position, insert a pellet into the barrel chamber. Then, avoiding contact with the rearsight close the barrel with the free hand until it engages with the catch, the closing force will increase as the air is compressed in the cylinder assembly. Keep fingers away from the trigger whilst cocking to prevent unintentional discharge.

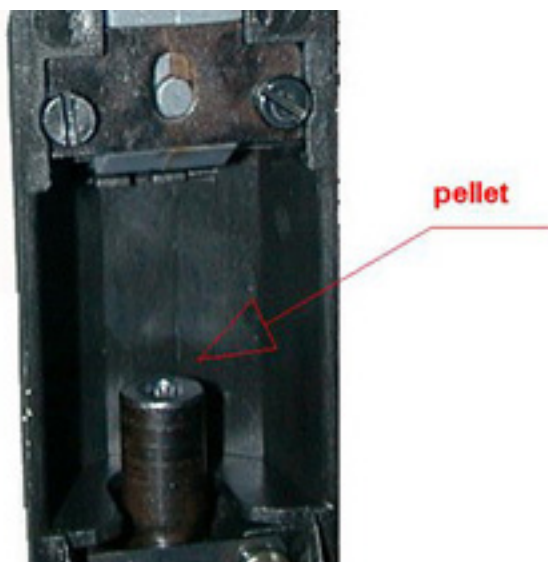

Do not open the barrel catch of a charged pistol or allow the barrel assembly to spring back uncontrolled

against the compressed air pressure during the cocking sequence as damage may result. If desired, apply the safe, by pushing its left hand side as far as it will go, the red dot will then disappear. When ready to fire, point the pistol towards the target and take a comfortable stance. IF applied, disengage the safe and squeeze the trigger until the pistol discharges.

## SAFETY RULES

1. **ALWAYS USE EYE PROTECTION.**
2. **ALWAYS USE HEARING PROTECTION.**
3. Air guns are not toys. They should only be used under adult supervision. Safety is a straightforward but continuous process. **THE UNSUPERVISED USE OF AIR GUNS IS NOT RECOMMENDED FOR PERSONS UNDER 16 -YEARS OF AGE.**
4. Think first, fire second.
5. Always point the gun in a safe direction. **NEVER POINT YOUR AIR GUN AT PEOPLE OR ANIMALS EVEN IF IT IS NOT LOADED.**
6. Always keep your fingers away from the trigger during cocking and handling. Keep your finger away from the trigger until you are ready to fire.
7. Always be certain of what is behind your target. Make sure your target does not conceal a person or some object which could be harmed by the pellets.
8. Do not fire at a target which allows ricochets or deflections. Do not fire into or at water. 9. Never use drugs or alcohol while handling this product.
10. Never reuse pellets.
11. The air gun and pellets should be kept in separate places, if possible under lock and key.
12. After use and before putting the air gun away, always make absolutely sure that there are no pellets in the chamber.
13. Do not load the air gun until you are ready to fire. Do not walk, run or jump when carrying a loaded air gun. A loaded air gun should never be carried inside a vehicle.
14. Do not tamper with or modify any part of your air gun. If a malfunction should occur, consult a professional gunsmith. Do not attempt to repair your air gun, since special tools are needed and this could be dangerous.
15. **ALWAYS KEEP THE AIR GUN AND/OR PELLETS OUT OF THE REACH OF CHILDREN.**

---

[Home](#) | [Search](#) | [Browse](#) | [About](#) | [Contact](#) | [FAQ](#)  
Manuals | [Privacy Statement](#) | [Articles](#)

---

Copyright © 1999-2007 [Pyramyd Air](#) All Rights Reserved.