



AIRSOFT-PISTOL

# P99 BLOW BACK



**THIS AIRGUN IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. Adult supervision required.**

**Rules for safe firing:**

1. Get to know the single parts of your new AIRSOFT pistol
2. Loading the gun
3. Proper aiming and firing
4. Hop-up
5. Care and maintenance
6. Warranty
7. Safe gun handling
8. technical data

**YOU AND OTHERS WITH YOU SHOULD ALWAYS WEAR SHOOTING GLASSES TO PROTECT YOUR EYES. READ ALL INSTRUCTIONS BEFORE USING. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS REGARDING THE USE AND OWNERSHIP OF THIS AIRGUN.** Please read this owner's manual completely. Treat this pistol with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

**▲ WARNING:** Not a toy. Adult supervision required. Misuse or careless use may cause serious injury, particularly to the eyes. May be dangerous up to 100 yards (91.44 meters).

**▲ WARNING:** Never assume that because the air pistol no longer fires a BB and/or the magazine is removed from the grip frame a plastic BB is not lodged in the barrel. Always treat the soft air pistol as though it is loaded and with the same respect you would a firearm.

**▲ WARNING:** Do not brandish or display this soft air pistol in public - it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

**▲ WARNING:** Never leave a cocked or loaded gun unattended!  
You should store this gun in unloaded and decocked condition. Make carefully sure that the barrel is clear. Keep the gun away from children and persons not skilled in the use of arms. Keep gun and projectiles separate from each other so that unauthorized persons have no access to it.

**▲ WARNING:** The gas used for blow-back guns is flammable. Do not smoke while handling the gun. Gas must only be charged in well-ventilated rooms. Do not fire into naked flames!

 

### 1. GET TO KNOW THE SINGLE PARTS OF YOUR NEW AIRSOFT PISTOL

It will help you to understand these instructions if you get to know the designation of the parts of your gun. Carefully read and understand these instructions in order to enjoy shooting this gun.

- |                              |                    |                      |
|------------------------------|--------------------|----------------------|
| 1 muzzle                     | 8 grip             | 15 BB follower       |
| 2 foresight                  | 9 grip strap       | 16 seal              |
| 3 slide                      | 10 release lever   | 17 valve             |
| 4 decocking lever            | 11 trigger         | 18 number of rounds  |
| 5 rear sight                 | 12 take-down lever | 19 gas charging hole |
| 6 cocking indicator, striker | 13 trigger guard   | 20 magazine          |
| 7 slide catch                | 14 loading port    |                      |

08-2008 2265002


OPERATION INSTRUCTIONS	2-7
MODE D'EMPLOI	8-13
MANUAL DE INSTRUCCIONES	14-19

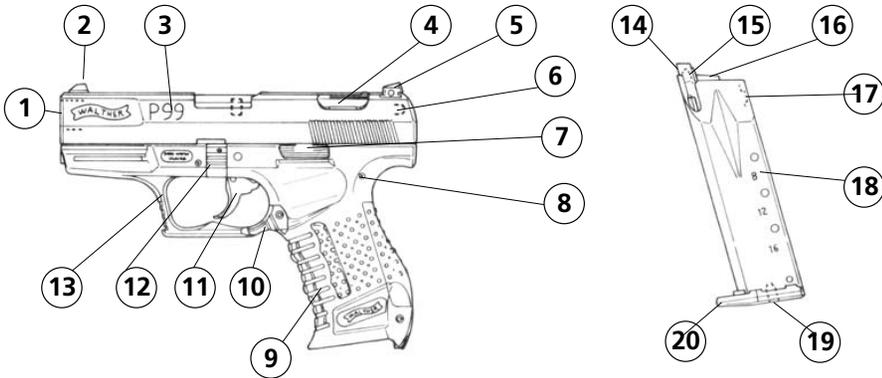

## 2. LOADING THE GUN



### 2.1 Removing the magazine:

To remove the magazine, press the release lever down and remove the magazine.


### 2.2 Charging gas:

Keep the magazine in the illustrated position, with the gas charging hole at the top. Keep the gas flask vertical and press the charging tube into the gas charging hole. As soon as the tank in the magazine is full there will be a discharge of gas.

**WARNING:** Gas is flammable! Do not smoke while handling the airgun!

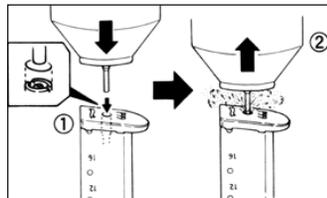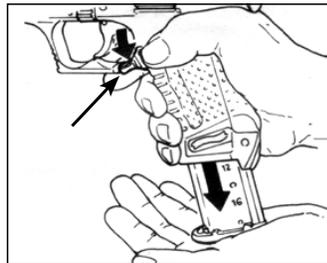


### 2.3 Loading the magazine with the loading adapter:

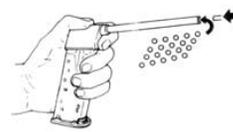

Put the loading adapter onto the magazine as illustrated. Insert up to 20 BBs in the loading rod. Tightly hold the adapter and the magazine and use the loading rod to press the BBs into the magazine.

Make sure that you hold the loading rod tightly when you remove the adapter from the magazine. (see illustration)

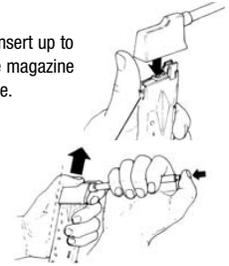

### 2.4 Inserting the magazine

Push the magazine into the gun until the release lever locks.




Note: Warranty expires if non-recommended BBs are used. It's recommended to use precise BBs from UMAREX-USA/Walther.

**WARNING:** Use .24 caliber (6 mm) plastic BBs only in this soft air pistol. Use of any other ammunition can cause injury to you or damage to the soft air pistol.

## 3. PROPER AIMING AND FIRING

**WARNING:** Make sure that the muzzle of the gun always points into a safe direction. Never aim at animals or persons. Always treat your gun as if it was loaded and ready to fire.

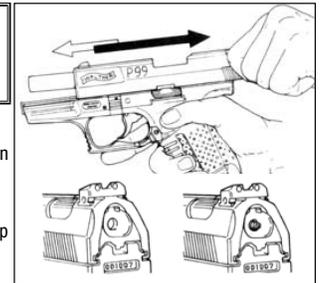


### Before you fire the first shot:

Retract the slide until you feel that it locks. Let the slide go. Now a BB has been loaded into the barrel and the striker has been cocked.

**Note:** If you fire the gun without having cycled the action first there will be no discharge of a projectile. Only the pressure required for shooting will be built up and the BB will be loaded.

### Aim at a safe target.

Hold the gun in a way that you see rear sight and foresight in one line. The foresight must be right in the centre of the rear sight notch. Now you lift the gun until the lower edge of the bull's eye of the target is on the upper edge of the foresight. Upper edge rear sight - upper edge foresight - lower edge target must all be in one line.

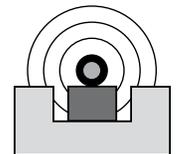

In case the rear sight is out of adjustment, adjust it as follows:  
point of impact too far right - turn adjustment screw clockwise  
point of impact too far left - turn adjustment screw counter-clockwise

### Firing:

1. pull trigger
2. the striker will be released and the BB will be fired
3. the slide moves backwards and then forward again and cocks the hammer.





**Note:** With the gas tank empty, there will not be enough energy to cock the striker.

**Note:** After the last BB has been fired, the slide will remain in its rearmost position. Press the slide catch to bring it back to the closed position.

**Note:** To decock the striker, press the decocking button.

**WARNING:** If the magazine is not empty, there will be a BB left in the barrel. The airgun is considered loaded.




#### 4. HOP-UP

A special system called the "Hop-up" has been fitted to the gun. This system causes the projectile to rotate when fired, thus providing a higher rate of energy. This will increase the range by up to 50% and will make shooting more accurate.

##### Adjustment of the Hop-up



###### a) Removing the slide

1 remove magazine, 2 decock hammer, 3 remove any BBs left in the barrel, 4 push down locking device, 5 remove slide from receiver, 6 the spring may trip from the gun while taking it apart. Insert it as illustrated.

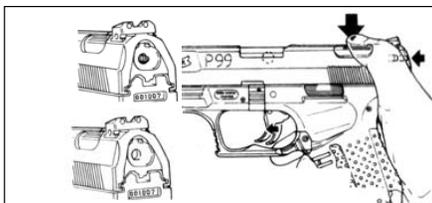



###### b) Adjusting the Hop-up

 To adjust the Hop, turn the screw to the right by approx. half a turn. Then make the following adjustments up or down (right and left)

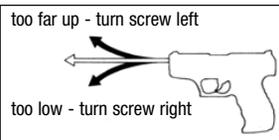


###### c) Putting the slide back on

 1 insert barrel properly: press the pivot (a) and press the barrel holder (b) down. Let the pivot go - barrel and barrel holder should now be flush (c).

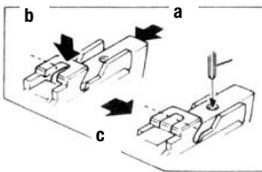

2 replacing the slide: put the slide on the receiver. The barrel holder should be in a straight position in the slide (2). Carefully push the slide back (3). Press down pivot (4) and locking device (5) until they reach the stop. The push the take-down lever up (6).

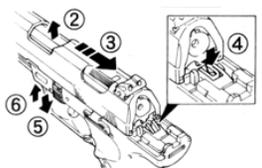

## 5. CARE AND MAINTENANCE

Good care and maintenance of the gun will provide you with many years of pleasant shooting with the gun.

**WARNING:** First, remove the magazine and check the barrel, it must be clear.

The metal parts on the outside have to be cleaned from time to time. Use a soft cloth slightly dampened with gun oil.

### 5.1 Unloading

 


Remove the magazine. Remove the BBs from the magazine until the follower is visible at the loading port.

Retract the slide and push the slide catch up. Push a cleaning pad through the barrel. This would cause a BB left in the barrel to fall out.




Now push the slide catch down and return the slide to its closed position.



To discharge the gas tank, use a pin to press the valve stud until all gas is discharged. Take care not to point discharging gas toward yourself or toward others.

Take care not to point discharging gas toward yourself or toward others.

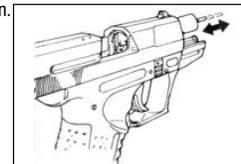

### 5.2 Stripping the gun


Remove the slide from the gun (refer to item 5a "adjustment of the Hop-up" - removing the slide)

### 5.3 Lubrication

Use a small amount of oil to lubricate the following parts in order to ensure proper function:

### 5.4 Assembly of the gun

refer to item 5c adjustment - putting the slide back on.

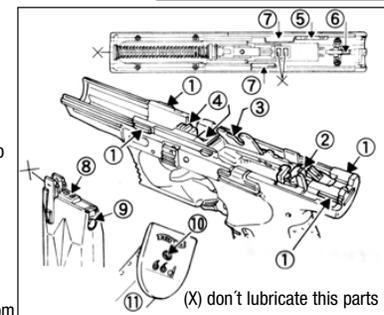

## 6. WARRANTY

### 90 DAY LIMITED WARRANTY

This product is warranted to the retail consumer for 90 days from date of purchase against defects in material and workmanship and is not transferable.

WHAT IS COVERED: Replacement parts and labor.

WHAT IS NOT COVERED: Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY CLAIMS: Warranty Claims and Repair for U.S. and Canadian customers only.

Call Umarex USA (479)-646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA. Your name, address, phone number and a note explaining the defect found must be included in the package. A copy of the original purchase receipt must accompany the return. Include a check made to Umarex USA in the amount of \$9.95 to cover shipping and handling.

IMPLIED WARRANTIES: Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to 90 days from date of retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.



## 7. SAFE GUN HANDLING

You should be fully familiar with the proper and safe handling of your gun. Bear in mind that your new gun features a high muzzle velocity, this requires extra care.

In respect to the basic rules of safe gun handling it is to be understood that every touching of the gun is to be interpreted as gun handling.

- Always treat a gun as if it was loaded.
- Always put the safety of a gun to "safe" when loading it so that there can be no unintentional discharge. Keep your finger away from the trigger, it should be straight and should rest on the trigger guard. The trigger is only to be touched for firing.
- Only use the kind of projectiles suitable for your gun.
- Always keep the muzzle pointed in a safe direction.
- This gun may only be discharged in your own house, on authorized shooting ranges and inside enclosed private property. It is to be made sure that no projectile can leave the enclosed property.
- The maximal range of the projectiles may exceed 150 metres, think of what you might hit before you shoot.
- Never transport a loaded gun. Only load your gun when you intend to fire it.
- Never aim your airgun at persons or animals. Avoid ricochets. Never fire at smooth, hard surfaces or water.
- Before you discharge your gun, make sure that target and surrounding area are safe.
- Always check your gun before you transport it or take it over from another person, it must be unloaded.
- Make sure that you always have full control over the muzzle of your gun, even if you stumble or fall down.
- Safety shooting glasses should always be worn when firing the gun.
- Always store your gun in a safe place and in unloaded condition. Unauthorized persons (persons not familiar with the use of guns, children and minors) must not have access to it, ammunition is to be kept in a separate place.
- The gun together with its operating instructions may only be handed over to persons who have reached the age of 16 (or older) and who are fully familiar with the handling of it.
- Modifications or repairs of guns are only to be performed by authorized agencies or by a skilled gunsmith.
- Never leave a loaded gun unattended.
- Only unloaded guns are to be handed over to another person.

## 8. TECHNICAL DATA

Action: AIRSOFT-gun with gas actuation  
Cal.: .24 (6 mm BB)  
Energy: 0,7 Joule  
Weight: 1,3 lbs  
Reach: max. 175 yds. (150 m)

