



ATTENTION: Read this manual and all safety instructions carefully before using this pistol.

⚠️ WARNING ATTENTION:
READ THIS INSTRUCTION MANUAL COMPLETELY.

This airgun is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety directions found in this instruction manual and keep this manual in a safe place for future use.

⚠️ WARNING Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 224 yards (205 meters).

This is a high powered airgun intended for use by those 16 years of age or older. Read all instructions before using. The purchaser and user should conform to all laws governing use and ownership of airguns.

 **SAFETY RULES**

EN

⚠️ WARNING

Before using your new Gamo CO2 pistol, you must take the time to read and understand the following safety rules:

- Do not install a magazine which contains ammunition into the gun until you are ready to shoot. If you do install a magazine which contains ammunition into the gun and then decide not to shoot, either manually remove the magazine from the gun or shoot the remaining ammunition at a safe target.
- An unloaded, non-pressurized gun with an “ACTIVATED” safety is safest.
- Accidents happen fast, and accidentally injuring or killing someone is a terrible thing. Please shoot safety.
- Whenever you handle a Gamo pistol, make sure the safety is “ACTIVATED” and there is no ammunition in the magazine.
- Always use eye protection.
- Always use hearing protection.
- Think first, shoot second.
- Always point the gun in a safe direction. Never point your air pistol at people or animals even if it is not loaded.
- Always keep your fingers away from the trigger until you are ready to shoot.
- Always be certain of what is behind your target. Make sure your target does not conceal a person or some object which could be harmed by the pellets.
- Do not shoot at targets which allow ricochets or deflections.
- Do not shoot into or at water.
- Never use drugs or alcohol while handling this product.
- The air pistol and pellets should be kept in separate and secured places.

 **SAFETY RULES**

EN

- Do not walk, run, jump or climb when carrying a loaded air pistol. A loaded air pistol should never be carried inside a vehicle.
- Never modify or alter your Gamo air pistol. Modification of the pistol may cause it to malfunction and tampering with the gun may make it unsafe.

⚠️ WARNING Do not brandish or display this airgun in public. It may confuse people and may be a crime. Police and others may think this airgun is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

⚠️ WARNING Do not use or carry the pistol in situations where it could be mistaken for a firearm.

⚠️ WARNING Do not show or display the CO2 pistol in public, since it could be mistaken for a real firearm and regarded as an offence. Do not change the colour or appearance of the CO2 pistol to look like a firearm. This is dangerous and may be regarded as an offence.

⚠️ WARNING This product is not a toy. Adult supervision is required. Improper or careless use may cause serious injury. May be dangerous up to a distance of 224 yards. This compressed air pistol is recommended for users over 16. Read the instruction manual before using this product. Buyer and seller must comply with all specific laws for the use and ownership of this compressed air pistol.



BASIC DESCRIPTION OF THE PISTOL

EN




GAMO OUTDOOR USA, Inc reserves the right to alter these specifications without prior notice



ENABLE/DISABLE MANUAL SAFETY MECHANISM

EN

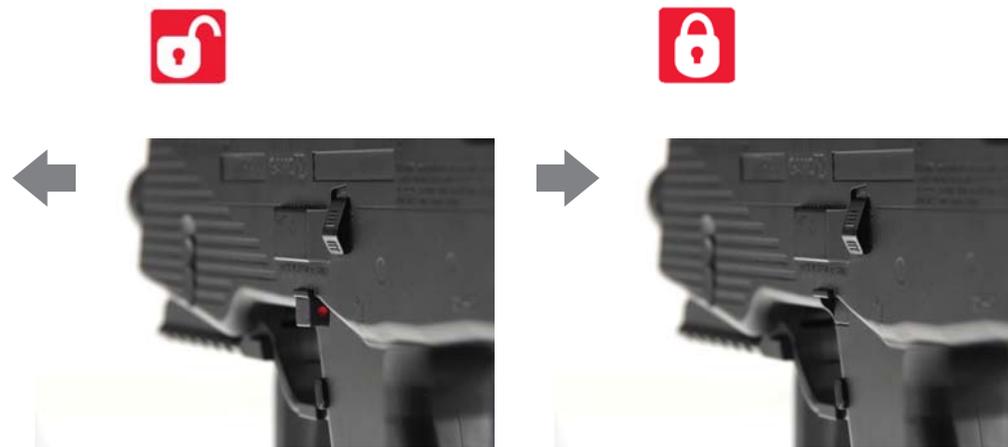

FIRE. Safety Mechanism OFF

Press the button leaving the red warning mark visible.

SAFE. Safety Mechanism ON

Press the button covering the red warning mark.



FITTING THE CO2 CYLINDER

EN



1

2

3/4/5

6/7

8

Instructions

Remember: Whenever you handle a CO2 pistol, ensure the safety mechanism is on, that there is no ammunition in the barrel and that it is pointing towards a safe place.

- 1- Remove the under tape
- 2- Press the button in the lateral of the grip panel to remove the magazine.
- 3- Press lightly on the grip panel in order to access the opening for loading the CO2 cylinder.
- 4- Carefully turn the screw holding the cylinder in place, below the capsule.
- 5- Insert the CO2 capsule.
- 6- Replace the loading CO2 cylinder of the pistol grip till it goes “click” and turn the screw counter clockwise to pierce the capsule with the valve needle.
- 7- Replace the magazine till it goes “click”.
- 8- Introduce again the under tape.



FITTING THE CO2 CYLINDER

EN

⚠️ WARNING

If the pistol is not used for a long period of time, we recommend removing the CO2 capsule. This will unload the capsule and the valve will not be damaged. Never attempt to forcefully insert a CO2 capsule.

⚠️ WARNING When removing the CO2 capsule, a small amount of gas may be released.

To prevent accidents, ensure the pistol is not loaded and has the safety mechanism activated before removing or fitting a CO2 cylinder.

⚠️ WARNING Keep CO2 cylinders away from heat and flames. Temperatures above 50°C (120°F) may cause explosion or injury. Never throw a CO2 cartridge into fire.

⚠️ WARNING Wear eye protection when handling the gas cylinder, since it can cause eye damage. Do not remove the gas cylinder until it is completely empty. Otherwise it can cause large amounts of residual gas to escape.

⚠️ WARNING Make sure your hands do not come into contact with any CO2 gas leaks. If your skin comes into contact with this gas, it may freeze.

⚠️ WARNING Use only 12 gram CO2 cylinders. Any attempt to use others types of gas cylinders could be extremely dangerous and could result in serious injury or death. Gases other than CO2 could result in an explosion or rupture the airgun.

⚠️ WARNING When preparing to store the pistol, point the barrel at the ground and make sure that the magazine is empty and that there are no steel BB in the barrel. In this way you will avoid possible accidents when using the pistol again.

⚠️ WARNING When there is an obstruction in the barrel, never shoot another pellet. Always make sure that the Safety is activated before clearing an obstruction.

⚠️ CAUTION Make sure that the Safety is activated and the CO2 bottle has been removed before proceeding with the removal of ammunition. Before removing the CO2 bottle, make sure that it is empty of CO2.


Maintenance

Maintenance



FILLING THE MAGAZINE

EN

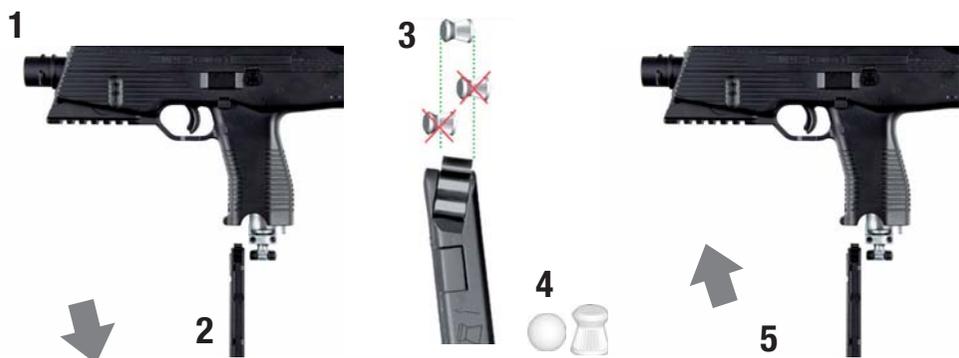

- 1 Press the button in the lateral of the grip panel
- 2 Remove the magazine

- 3 Take the magazine and fill it with the pellets.
- 4 Capacity for 8 shot rotary clip x 2; 16 pellets or steel BB's.

- 5 Insert the magazine loaded with pellets or steel BB's.

WARNING Only use pellets or steel BB's that are in perfect condition. Ensure you use the correct caliber in order to prevent damage to your CO2 pistol. We recommend using Gamo pellets, for example Match .177 (4,5mm) or Gamo steel BB's.



AIMING AND FIRING

EN



AIMING



FIRING





THE CO2 BOTTLE

Some factors may affect the CO2 bottle and its proper functioning. For example, using, maintaining and storing the pistol at high temperatures or temperatures below normal outdoor temperatures (15°C/59°F to 21°C/69.8°F). Another factor would be rapid firing of the gun.

- 1- High temperatures can increase the pressure in the CO2 bottle and inside the pistol, causing above normal operating pressure. This increase in temperature may cause malfunction or permanent damage. The maximum storage or operation temperature should never exceed 50°C (122°F). If the gun is exposed to direct sunlight on a bright day, this temperature may be reached. For this reason, and to ensure it functions correctly, do not expose the pistol to high temperatures or to direct sunlight for long periods. Otherwise, the CO2 bottle may overheat and rupture, which could damage the gun and cause injury to people nearby.
- 2- Rapid consecutive shots may reduce the temperature of the pistol and of the CO2 bottle, thereby reducing the velocity of the projectiles and possibly even reducing the pressure of the gas so that the gun cannot make the shot. This problem is more likely to occur if shooting in cold climates and can be avoided by allowing longer intervals between shots. This increases the temperature and pressure of the gas, normalising the velocity.
- 3- Rapid firing reduces the initial velocity of each shot. This may affect the accuracy of the shots and will mean fewer shots per CO2 bottle.
- 4- Avoid firing with a CO2 bottle that has low pressure. Some low pressure indicators:
 - The sound of the shot is not as strong after a new reload of the CO2 bottle.
 - The projectile impacts the target, but in a lower position than when shooting with a new CO2 bottle.



Repairs

A compressed air pistol that is not functioning well can be dangerous. Do not attempt to repair the gun yourself, since this may cause abnormalities in its functioning. Use a Gamo cleaning rod caliber 4.5mm (.177 in) if a pellet or steel BB has become blocked in the barrel. Take your gun to approved gunsmiths or to professional repair specialists approved for this type of product.



Cleaning

Before cleaning the barrel of the pistol, ensure it is not loaded and that its safety mechanism is on. To clean the barrel of the pistol, take out the CO2 cylinder, remove the magazine and use Gamo cleaning rod for 4.5mm (.177in) caliber, patch-covered jag and brush. Insert the cleaning rod from the muzzle. Remember: lubricating oil should never be used on the barrel. From time to time, it is advisable to apply some special GAMO oil to the metal parts, to prevent rusting.



Storage

CO2 pistols should be stored so that they are protected from unsupervised use by children. Always store the pistol in a clean, dry place. We recommend storing the pistol in an anti-corrosion box or case.



ONE (1) YEAR LIMITED WARRANTY



GAMO warrants this product to be free of original defects in material and workmanship for one (1) year. This warranty applies only to goods purchased in the USA. At its option, GAMO will repair or replace this product without charge for parts and labor, providing our inspection indicates that an original defect exists. Should GAMO choose to replace the product, and the product is no longer available at the time warranty service is required, a substitution of similar performance and equal or greater value will be made. This warranty does not include damage caused by abuse, unauthorized repair or modification of any kind. There are no warranties that extend beyond the description on the face hereof. Gamo makes no implied warranty of merchantability or implied warranty of fitness (for a particular purpose). Some states do not allow limitations of implied warranty, so this limitation may not apply to you. In that event, any such implied warranty is limited to that required by law. GAMO shall not be liable for incidental or consequential damages, including but not limited to lost profits or other economic or commercial losses. The sole remedy provided in this warranty is repair or replacement of the product. To activate this warranty you must mail within 60 days the enclosed GAMO warranty card to:

GAMO OUTDOOR USA, Inc.
3911 SW 47th Avenue, Suite 914
Ft. Lauderdale, Florida 33314
Phone (954) 581-5822E-Mail: info@gamousa.com

Include with your product a note explaining the nature of the problem and be sure to indicate your name, address, and telephone number. Also include a check or money order in the amount of \$10.00 to cover postage and handling. In the event of a non-warranty repair, you will receive an estimate prior to any work being done. This warranty gives you specific legal rights and you may have other rights which vary from state to state. As defined by federal law, this is a limited warranty.

