

NXGTM

APXTM OPERATION MANUAL Multi-Pump Pneumatic Air Rifle

Shoots Pellets or BBs   Tire des projectiles ou BBs   Disparar balines o BBs  

Model	Caliber	Velocity	Danger Distance
APX TM	.177	800 fps (245 mps) <i>w/alloy pellet</i>	525 yds (480 m)
APX TM w/Scope	.177	800 fps (245 mps) <i>w/alloy pellet</i>	525 yds (480 m)



OR



- EN** Operating instructions 2 - 13
- FR** Mode d'emploi 14 - 27
- ES** Instrucciones de operación 28 - 40

READ THIS OWNER'S MANUAL COMPLETELY. This airgun is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

⚠ WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 525 YARDS (480 METERS).

THIS IS A HIGH POWERED AIRGUN FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING THE PURCHASE, USE AND OWNERSHIP OF AIRGUNS.





SAFETY INSTRUCTIONS

EN

⚠ WARNING: THIS AIRGUN CAN CAUSE SERIOUS INJURY OR DEATH. READ AND FOLLOW THE INSTRUCTIONS CAREFULLY. DO NOT LOAD A PROJECTILE INTO THE AIRGUN UNTIL YOU ARE READY TO SHOOT. IF YOU DO LOAD A PROJECTILE AND THEN DECIDE NOT TO SHOOT, REMOVE IT EITHER MANUALLY OR BY SHOOTING THE AIRGUN AT A SAFE TARGET. AN UNLOADED, UNPUMPED AIRGUN WHICH IS "ON SAFE" IS SAFEST. ACCIDENTS HAPPEN FAST, PLEASE HANDLE THE AIRGUN SAFELY.

Airguns differ in their operation and you are never ready to fire any gun until you are thoroughly familiar with it. Read the following operating instructions thoroughly prior to operating.

These symbols,   , mark warnings and cautions in this operation manual. Carefully follow them for your own safety and the safety of others.



CAUTION

FAILURE TO FOLLOW THE INSTRUCTIONS AND RECOMMENDATIONS IN THIS OWNER'S MANUAL MAY RESULT IN BODILY INJURY INCLUDING FACE, EYE, AND EAR INJURY, BLINDNESS, OR DEAFNESS.



⚠ CAUTION:
EYE PROTECTION
REQUIRED
WEAR YOUR
SHOOTING GLASSES

OPERATING STEPS

1. Reviewing Safety
2. Learning the Parts of Your Air Rifle
3. Operating the Safety
4. Pumping your Air Rifle
5. Loading your Air Rifle
6. Unloading your Air Rifle
7. Aiming at a safe target
8. Firing your Air Rifle
9. Adjusting the Sights
10. Trouble Shooting
11. Care and Maintenance
12. Repair / Service / Warranty



DESCRIPTION



OPERATION



CARE



SAFETY INSTRUCTIONS



STEP 1. Reviewing Safety

- Always keep the muzzle of the airgun pointed in a **SAFE DIRECTION**.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- You and others with you **MUST** always wear shooting glasses to protect your eyes. If you wear reading glasses the lenses must be certified for impact resistance or you should wear safety glasses intended for use over normal optical reading glasses.
- Always aim in a **SAFE DIRECTION**.
- Never point the airgun at anything you do not intend to shoot.
- Never point an airgun at people or pets.
- Always treat the airgun as though it is loaded and with the same respect you would a firearm.
- Never look down the barrel of an gun.
- Always keep the airgun “**ON SAFE**” until you are ready to shoot.
- Always check to see if the airgun is “**ON SAFE**” and unloaded when getting it from another person or from storage.
- Never leave a loaded airgun unattended.
- Never climb or jump with an airgun.
- You must control the direction of the muzzle if you stumble or fall.
- Keep the muzzle clear. Never let anything obstruct the muzzle of the airgun. Don't allow the muzzle to come in contact with the ground.
- Use only the proper size and type of projectile as it is marked on the airgun.
- Never reuse ammunition.
- Do not shoot at hard surfaces or at the surface of water. The projectile may bounce off or ricochet and hit someone or something you had not intended to hit.
- Do not shoot at fragile objects such as windows.
- Place the backstop in a location that will be safe should the backstop fail.
- Your backstop should be checked for wear before and after each use. All backstops are subject to wear and will eventually fail. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Do not attempt to disassemble or tamper with your airgun. Unauthorized repairs or modifying the function of your airgun in any way may be unsafe and will void your warranty.
- Before you store or transport your airgun, make sure it is unloaded and is “**ON SAFE**.”
- Always store your airgun in a secure location away from unauthorized users and separate from ammunition.
- Only persons who are thoroughly familiar with the airgun's function and proper use and who are allowed by law should handle the airgun.
- Always wear safety shooting glasses when shooting or performing maintenance on airguns.
- Only shoot where permitted by law.

SHOOT SAFELY

We encourage you to contact a local organization to sign up for a shooting safety class in your area. Here are some suggestions:

- A local gun club
- NSSF.org
- Civilian Marksmanship Program (CMP) - www.odcmp.com
- NRAHQ.org

**STEP 2. Learning the Parts of Your Air Rifle**

illustration 1



⚠ WARNING: BE SURE THE AIRGUN IS ALWAYS POINTED IN A SAFE DIRECTION. NEVER POINT THE AIRGUN AT ANY PET OR PERSON EVEN IF IT IS UNPUMPED AND UNLOADED. ALWAYS ASSUME AND HANDLE THE AIRGUN AS IF IT WERE LOADED AND READY TO FIRE.

⚠ CAUTION

- ALWAYS MAKE SURE THAT THE MUZZLE POINTS IN A SAFE DIRECTION.
- ONLY HANDLE THE AIR RIFLE WHEN IT IS ON SAFE.

STEP 3. Operating the Safety

The NXG™ APX™ Air Rifle has an automatic safety.

To put “ON SAFE”, push the safety slider to the SAFE (S) position. (illustration 2a)

The Safety will be placed on SAFE (S) automatically every time the pumping lever is activated. (illustration 2b)

To Fire, put the airgun “ON FIRE” by pushing the safety from SAFE (S) to FIRE (F). (illustration 2c)



Illustration 2a

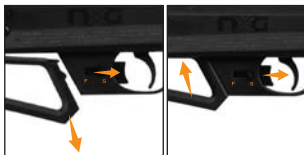


Illustration 2b



Illustration 2c

⚠ ATTENTION

BEFORE YOU PUT YOUR AIR RIFLE “ON FIRE”, BE ABSOLUTELY CERTAIN THAT YOUR AIR RIFLE IS POINTED IN A SAFE DIRECTION AND THAT YOU ARE READY TO FIRE. ONCE YOUR AIR RIFLE IS PUMPED AND AUTOMATICALLY “ON SAFE”, DO NOT RECOCK THE AIR RIFLE WHILE IT IS LOADED. TO PUT IT BACK “ON SAFE”, SEE “STEP 3. OPERATING THE SAFETY” FOR INSTRUCTION ON HOW TO PUT THE APX BACK “ON SAFE”.

⚠ CAUTION

LIKE ALL MECHANICAL DEVICES, AN AIRGUN SAFETY CAN FAIL. EVEN WHEN THE SAFETY IS “ON SAFE”, YOU SHOULD CONTINUE TO HANDLE THE AIRGUN SAFELY. NEVER POINT THE AIRGUN AT ANYTHING YOU DO NOT INTEND TO SHOOT.



⚠ WARNING: DO NOT OPEN THE BOLT, CLOSE THE BOLT AND THEN PULL THE TRIGGER BEFORE PUMPING. THIS PROCEDURE CAN RESULT IN A LOADED GUN AND A PROJECTILE BEING EXPELLED FROM THE GUN DURING PUMPING. OPENING THE BOLT, PUMP, THEN CLOSE THE BOLT.

STEP 4. Pumping Your Air Rifle

Open the bolt. (illustration 3). It must be open to pump the airgun. For added safety, leave the bolt open while pumping. Keep the muzzle pointed in a safe direction, then pump the airgun. More pumps means more power, but DO NOT pump more than 10 times. NOTE: Pumping more than 10 times will not increase muzzle energy, but it will damage you airgun and void the warranty.



Illustration 3

CLOSING THE PUMPING LEVER - Grasp the pumping lever, return it to the closed position. (illustration 2c)



CAUTION

NEVER PUT YOUR FINGER ON THE TRIGGER UNTIL YOUR TARGET IS DEEMED SAFE AND YOU ARE READY TO FIRE.



CAUTION

ONLY CLOSE THE BOLT WHEN THE MUZZLE IS POINTED IN A SAFE DIRECTION.

PULL LEVER OUTWARD FOR FULL STROKE THEN RETURN

Number of pumps vary depending on your target distance. Here are some examples.

- Indoor shooting, 2 pumps
- 10-meter (33-ft.) distance, 4 to 6 pumps.
- Over 33-ft., 7 to 10 pumps.

NOTE: Never pump more than 10 times. Over pumping will cause serious damage to your air rifle.

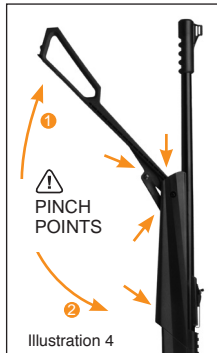


Illustration 4



CAUTION

BE CAREFUL TO KEEP FINGERS CLEAR OF PUMPING MECHANISM (SEE "PINCH POINTS", ILLUSTRATION 4). GRASP THE LEVER FIRMLY AS YOU PUMP IT AND CLOSE IT TO PREVENT IT FROM SNAPPING BACK AND POSSIBLY CAUSING INJURY.

⚠ WARNING: BBS FEED FROM THE RESERVOIR BY GRAVITY WHICH REQUIRES THAT THE MUZZLE BE RAISED. NEVER ASSUME THE RESERVOIR OR CHAMBER IS EMPTY EVEN IF THE AIR RIFLE DOES NOT FIRE A PROJECTILE.



STEP 5. Loading Your Air Rifle

Filling the BB reservoir - The loading door is located on the left side of the receiver. Slide door open and fill reservoir with approximately 75 BBs. (**illustration 5a**) Do not overfill or the feed system may not operate properly.

LOADING BBs - With the bolt handle back and BBs in the reservoir, RAISE the muzzle of the air rifle 45 degrees to 90 degrees. (**illustration 5e**). When raising the muzzle, be sure the front sight is pointed upward since the air rifle may not feed properly if it is on its side (**illustration 5b**). A BB can be seen on the magnetic tip by looking into the loading port (**see illustration 5c**). If a BB does not feed onto the magnetic tip when the muzzle is raised, shake the gun slightly. Push bolt handle fully forward to place the BB in firing position. **NOTE:** Do not load more than one BB at a time.

 


Illustration 5e

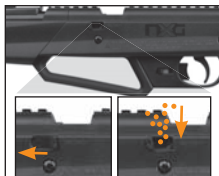


Illustration 5a

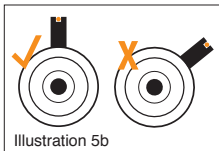


Illustration 5b

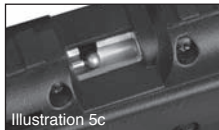


Illustration 5c

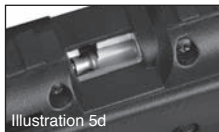


Illustration 5d

STEP 6. Unloading Your Air Rifle

UNLOADING A PELLET - The magnetic tip does not extract a pellet. You must shoot the pellet out into a safe target if available. If a safe target is not available, open bolt, insert a .177 cleaning rod into the muzzle end and push the pellet out of the barrel. Do not allow a pellet to fall into the rear of the loading port and become jammed in the BB feeding hole.

TO EMPTY BB RESERVOIR - Open bolt, open the BB reservoir door, cup your hand over it and tilt the Air Rifle fully to the left side. Shake air rifle until all BBs are removed. Then remove BBs from loading port. (**see illustration 5c**).

⚠ WARNING: LEAD PELLETS CONTAIN LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. DO NOT INHALE DUST OR PUT LEAD PELLETS IN MOUTH. WASH HANDS AFTER HANDLING. KEEP AWAY FROM CHILDREN.


**CAUTION**

USE ONLY .177 CALIBER (4.5 MM) PELLETS OR STEEL BBs. DO NOT ATTEMPT TO REUSE PELLETS OR STEEL BBs THAT HAVE BEEN FIRED OR ARE DEFORMED. DO NOT USE BUCK SHOT, DARTS, BALL BEARINGS, OR OTHER FOREIGN OBJECTS BECAUSE THEY CAN CAUSE INJURY TO YOU OR SOMEONE ELSE OR MAY DAMAGE AND/OR JAM THE AIRGUN.

STEP 7. Aiming at a Safe Target

Always aim your air rifle in a SAFE DIRECTION. Always choose your target carefully. It is best to shoot at a paper bullseye target which is attached to a safe backstop. A heavy blanket should be hung behind the target backstop to prevent ricochet should you miss the backstop. Think about what you will hit if you miss the target.

THE NXG™ APX™ AIR RIFLE has open sights. Air rifles with this type of sight are correctly aimed when the front sight blade is positioned exactly in the notch of the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bullseye should appear to rest on the top of the front sight (illustration 6).

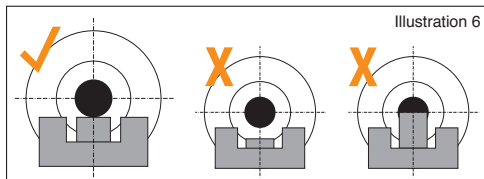**CAUTION**

YOUR BACKSTOP SHOULD BE INSPECTED FOR WEAR BEFORE AND AFTER EACH USE. DISCONTINUE USE IF THE BACKSTOP SURFACE SHOWS SIGNS OF FAILURE. ALWAYS PLACE THE BACKSTOP IN A LOCATION THAT WILL BE SAFE SHOULD THE BACKSTOP FAIL. DISCONTINUE THE USE OF A BACKSTOP IF THE PROJECTILE REBOUNDS OR RICOCHETS.

**STEP 8. Firing Your Air Rifle**

When you are absolutely sure your air rifle is aimed at a safe target and you are ready to fire, put your air rifle "OFF SAFE" (see **STEP 3. OPERATING THE SAFETY**). Squeeze the trigger.

⚠ WARNING: IF A PROJECTILE DOES NOT FIRE AFTER COMPLETING THE OPERATION STEPS, THE AIRGUN MAY BE JAMMED. AN UNFIRED PROJECTILE IN THE BARREL CAN BE A DANGEROUS SITUATION. KEEP THE AIRGUN POINTED IN A SAFE DIRECTION AND REPEAT THE OPERATION STEPS. IF A PROJECTILE STILL DOES NOT FIRE, DO THE FOLLOWING:

1. Open Bolt.
2. Clear barrel by inserting a cleaning rod through the muzzle end.
(see illustration 9)
3. Repeat operation steps.

⚠ WARNING: NEVER ASSUME THAT BECAUSE THE AIRGUN NO LONGER FIRES A PROJECTILE THAT A PROJECTILE IS NOT LODGED IN THE BARREL. ALWAYS TREAT THE AIRGUN AS THOUGH IT IS LOADED AND WITH THE SAME RESPECT YOU WOULD A FIREARM.

NOTE: Many factors affect airgun performance and velocity, including number of pumps, brand of projectile, lubrication, barrel condition and temperature.

**CAUTION**

DO NOT ATTEMPT TO REUSE FIRED PROJECTILES OR PROJECTILES WHICH ARE DEFORMED. PROJECTILES SUCH AS STEEL SHOT (BBS) AND DARTS MAY DAMAGE YOUR AIR RIFLE AND CAUSE INJURY TO YOURSELF OR BYSTANDERS DUE TO RICOCHETING, AND WILL VOID THE WARRANTY.

⚠ WARNING: NEVER CARRY YOUR AIR RIFLE WHILE PUMPED AND/OR WHILE LOADED. NEVER CLIMB OR JUMP WITH YOUR AIR RIFLE WHILE PUMPED AND/OR LOADED. IT IS BEST TO PUMP THE AIR RIFLE ONLY BEFORE SHOOTING. UNDER NO CIRCUMSTANCES SHOULD YOUR AIR RIFLE BE CARRIED PUMPED AND LOADED.



STEP 9. Adjusting the Sights

The rear sight can be adjusted for windage (horizontal) and elevation (vertical).

Elevation Settings—To raise point of impact on the target, push the sight elevator toward the muzzle. To lower point of impact on the target, push the sight elevator rearward, away from the muzzle. (see **illustration 7**)

Windage Settings—Loosen windage adjustment screw “A” by turning counterclockwise (see **illustration 8**). Adjust rear sight to the right side of the air rifle to make it shoot to the right, or to the left side of the air rifle to make it shoot to the left. Make certain windage adjustment screw is retightened after adjustment.

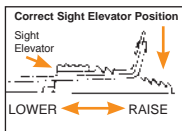


Illustration 7

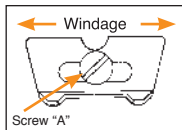


Illustration 8

STEP 10. Trouble Shooting

CLEARING A JAM - Open the bolt, if the bolt is not completely closed, do not try to close it until after opening it by pulling the bolt handle all the way back. The air rifle will not fire a projectile when the bolt is completely open. Repeat previous operations except (Do Not Load BBs or Pellets). Pump your air rifle up 10 times, if a projectile still does not fire, follow these steps carefully:

1.) Open Bolt 2.) Clear barrel by running the correct caliber ramrod into the muzzle end and push the projectile out (see **illustration 9**). Be careful not to damage the bolt tip by pushing the rod through too hard. Do not reuse this BB or pellet. If you are not able to unjam your air rifle, contact Umarex USA's Service Department.



Illustration 9



OPERATION



CARE

EN

STEP 11. Care and Maintenance



CAUTION

BEFORE ANY CARE, CLEANING OR MAINTENANCE, ALWAYS BE SURE YOUR AIRGUN IS UNLOADED. KEEP POINTED IN A SAFE DIRECTION. IT IS IMPORTANT TO PERFORM ROUTINE INSPECTIONS AND MAINTAIN YOUR AIRGUN PROPERLY.

NEVER STORE A LOADED OR PUMPED AIRGUN. Unload pellet from the airgun. Keep air rifle away from unsupervised children and untrained shooters. Store projectiles separately from the air rifle. Protect your air rifle from moisture and dirt; clean airgun and wrap it in a smooth, dry cloth. If you are going to store your airgun for an extended length of time be sure the barrel is protected. This can be accomplished by coating the bore with RWS Spring Cylinder Oil. Remove the oil completely before the next use. REMEMBER: Always check to see that the airgun is unloaded when getting from storage or from another person.

With care and routine inspections your airgun will provide many sessions of shooting enjoyment. Abuse, neglect and continued exposure to the elements will impair the performance of any airgun.

NXG™ APX™ Air Rifle is designed to fire caliber .177 pellets and steel BBs only. We recommend the use of RWS Pellets and Umarex BBs because of their superb accuracy and dimensional uniformity. The correct caliber is clearly indicated on the rifle.



CAUTION

NEVER LEAVE YOUR AIR RIFLE PUMPED FOR AN EXTENDED PERIOD OF TIME. THIS COULD RESULT IN A TIME DELAY FROM THE TIME THE TRIGGER IS PULLED UNTIL THE PROJECTILE IS ACTUALLY FIRED FROM THE AIR RIFLE. LEAVING YOUR AIR RIFLE PUMPED FOR MORE THAN ONE HOUR COULD RESULT IN PERMANENT DAMAGE TO THE AIR RELEASE VALVE.

OILS THAT CONTAIN ACID OR RESIN CAN DAMAGE SEALS AND POSSIBLY THE FINISH OF THE AIRGUN.


⚠ WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC – IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.



WORKING PARTS: The working parts (pumping lever hinges, trigger hinges, bolt and the foam wiper on the piston) require very little lubrication. Two(2) drops of RWS Air Chamber Lube every 1000 shots will suffice. It is easily applied with a 3 1/2" applicator needle (see **illustration 10**). Remember, a little is good—a lot is not better.

BARREL: In day to day use, very little dirt or residue will accumulate in the bore. This can be removed by using RWS Cleaning Pellets. Note: High quality RWS Lead Pellets not only increase accuracy, they help to reduce lead deposit. During periods of regular use the bore of the barrel should be cleaned periodically by means of a felt wad or cleaning rod with wool mop.

SURFACE: The exposed metal parts (rear sights, screw heads, trigger, etc.) MUST be wiped clean using a slightly oiled cloth after handling to prevent rust. Use light acid free and resin free oil. RWS Spring Cylinder Oil is excellent for this.

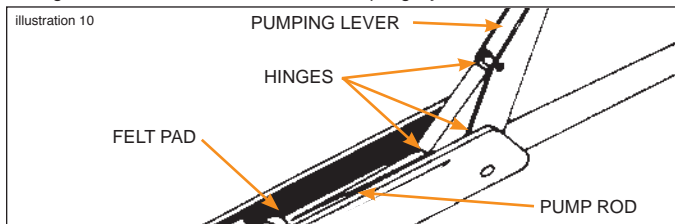


CAUTION

CHECK THE TIGHTNESS OF THE STOCK SCREWS BETWEEN, DURING, AND AFTER SHOOTING ACTIVITY. LOOSE SCREWS MAY CAUSE INJURY.

CAUTION

THE COMPONENTS OF THIS AIRGUN WERE ENGINEERED AND MANUFACTURED TO DELIVER OPTIMUM PERFORMANCE. ANY MODIFICATION OR TAMPERING WITH AN AIRGUN MAY CAUSE A MALFUNCTION, VOID YOUR WARRANTY AND MAY MAKE IT UNSAFE TO USE. ANY CHANGE IN PERFORMANCE (SUCH AS A LOWERED TRIGGER PULL FORCE AND SHORTENED TRIGGER TRAVEL) INDICATES POSSIBLE MODIFICATION, TAMPERING AND/OR WEAR. SUCH AIRGUN SHOULD BE INSPECTED, REPLACED, OR PROPERLY REPAIRED BY ONLY QUALIFIED UMAREX USA PERSONNEL. ANY AIRGUN THAT HAS BEEN DROPPED SHOULD BE CHECKED BY QUALIFIED PERSONNEL TO ENSURE THAT ITS FUNCTION HAS NOT BEEN AFFECTED.

 WARNING: AN AIRGUN THAT IS NOT OPERATING PROPERLY MAY BE DANGEROUS. IT SHOULD BE KEPT SAFELY FROM USE BY ANYONE UNTIL REPAIRED OR DESTROYED. DO NOT TRY TO TAKE THE AIRGUN APART. IT IS DIFFICULT TO REASSEMBLE AND IMPROPER DISASSEMBLY OR REASSEMBLY CAN CAUSE SERIOUS INJURY OR DEATH.



STEP 12. Repair / Service / Warranty

Do not return defective or damaged product to the dealer. If your airgun needs repair, call Umarex USA (479) 646-4210 and ask for the Service Department or visit www.umarexusa.com. **DO NOT ATTEMPT TO DISASSEMBLE IT!**

Your airgun requires special tools and fixtures to repair it. Any disassembly or modification not performed by Umarex USA will void the warranty.

1 YEAR LIMITED WARRANTY

This product is warranted to the retail consumer for one (1) year from date of purchase against defects in material and workmanship and is not transferable.

WHAT IS COVERED

Replacement parts and labor.

WHAT IS NOT COVERED

Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY CLAIMS

Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479)-646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA (Canadian customers will be provided with the address of an authorized Canadian Repair Facility). Your name, address, phone number and a note explaining the defect found must be included in the package. **A copy of the original dated cash register receipt must accompany the return.** U.S. customers, include a check made to Umarex USA in the amount provided by Umarex USA's service department to cover shipping and handling.

IMPLIED WARRANTIES


Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one (1) year from date of retail purchase. **SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. TO THE EXTENT ANY PROVISION OF THIS WARRANTY IS PROHIBITED BY FEDERAL, STATE, OR MUNICIPAL LAW WHICH CANNOT BE PREEMPTED, IT SHALL NOT BE APPLICABLE.** THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

TO VALIDATE THIS WARRANTY—Send in the registration card within 30 days to: Umarex USA, 7700 Chad Colley Boulevard, Fort Smith, Arkansas 72916 or **Register online at www.UmarexUSA.com.**



NOTES

ES

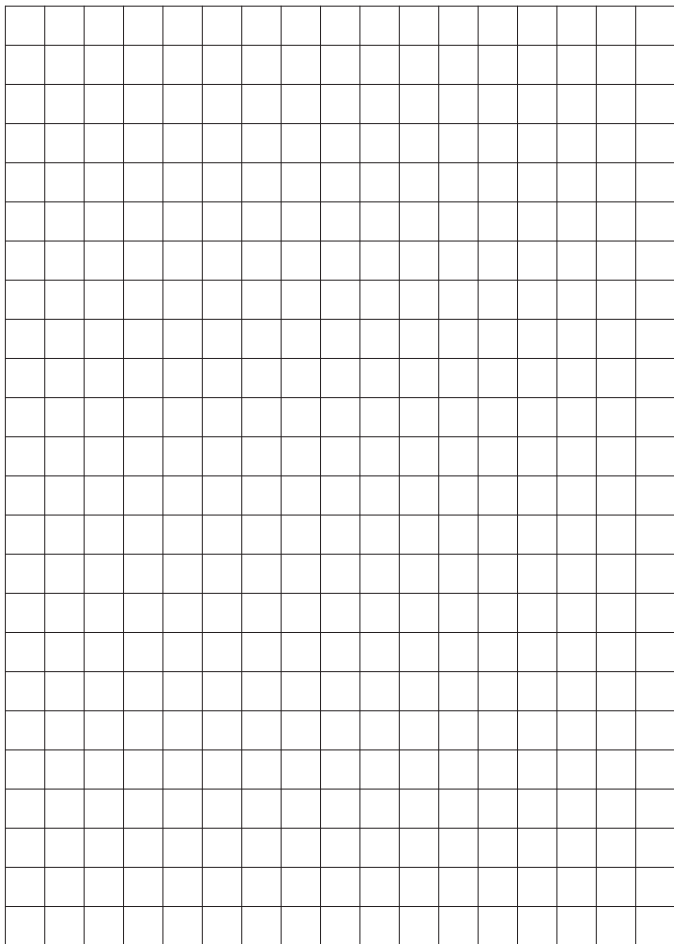

NXG™ APX™ Specifications


Action	Multi-Pump Pneumatic	Sights	Blade Front, Adj Rear
Caliber / Ammunition	.177 Cal. (4.5 mm) Lead Pellet	Overall Length	39" (99cm)
LOP	14.25" (36.2 cm)	Barrel Length	20" (51cm)
Trigger	3.5 lbs. (1.6 kg)	Barrel	Rifled
Weight	3.4 lbs. (1.5 kg)	Safety	Automatic
		Velocity	800 fps w/alloy
		Danger Distance	525 yds (480 m)

Caractéristiques du NXG™ APX™

Action	Multi-Pump Pneumatic	Mires	Blade Front, Adj Rear
Calibre / Projectiles	4.5 mm (.177 Cal.) Projectiles de Plomb	Longueur	99 cm (39")
Distance détente/crosse	36.2 cm (14.25")	Longueur du canon	51 cm (20")
Détente	1.6 kg (3.5 lbs.)	Canon	Rayé
Poids	1.5 kg (3.4 lbs.)	Sûreté	Automatique
		Vélocité	245 mps w/alloy
		Distance Dangereuse	480 m (525 yds)

Especificaciones de NXG™ APX™

Acción	Multi-Pump Pneumatic	Miras	Blade Front, Adj Rear
Calibre / Munición	4.5 mm (.177 Cal.) Projectiles de plomo	Longitud	99.2 cm (39.1")
Longitud de tracción	36.2 cm (14.25")	Longitud del cañon	51 cm (20")
Gatillo	1.6 kg (3.5 lbs.)	Cañon	Único
Peso	1.5 kg (3.4 lbs.)	Seguridad	Automático
		Vélocidad	245 mps w/lead
		Distancia de Peligro	480 m (525 yds)

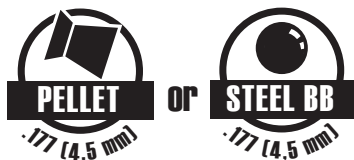

This OWNER'S OPERATION MANUAL should always accompany the airgun and be transferred with it upon change of ownership or when presented to another person.

Ce manuel d'UTILISATION DU PROPRIÉTAIRE devrait toujours accompagner l'arme à air et être donné avec celle-ci lorsqu'il y a changement de propriétaire ou lors de l'utilisation par une autre personne.

Este MANUAL DE OPERACIONES DEL DUEÑO siempre debe acompañar a la pistola de aire y transferirlo con ella si se cambia el dueño o cuando se le presenta a otra persona.

We reserve the right to make color and design changes and technical improvements.
No responsibility is accepted for printing errors or incorrect information.

Sauf modifications de la couleur et du design ainsi que des améliorations techniques, erreurs d'impression et erreur.
Toutes les données sont fournies sans garantie.

Nos reservamos el derecho para realizar cambios al color y diseño y mejoras técnicas.
No se acepta responsabilidad por errores de impresión o información incorrecta.

© UMAREX USA

UX **UMAREX**
ZEROED IN

Distributed by / Distribué par:
UMAREX USA, INC.
7700 Chad Colley Boulevard
Fort Smith, AR 72916
www.UmarexUSA.com